




Technical Information

**SUNNY TRIPOWER 60 / SUNNY HIGHPOWER PEAK1 /  
SUNNY TRIPOWER STORAGE 60  
SunSpec<sup>®</sup> Modbus<sup>®</sup> Interface**

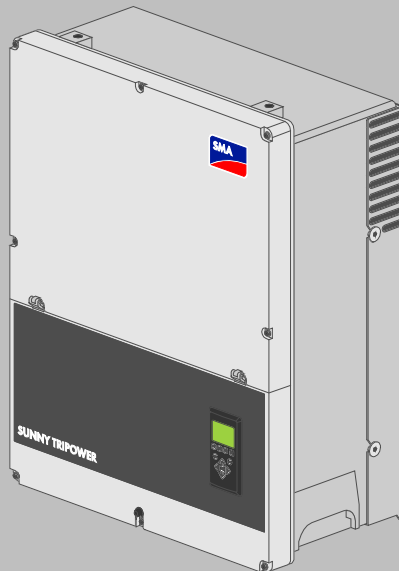

## Legal Provisions

The information contained in these documents is the property of SMA Solar Technology AG. Any publication, whether in whole or in part, requires prior written approval by SMA Solar Technology AG. Internal reproduction used solely for the purpose of product evaluation or other proper use is allowed and does not require prior approval.

SMA reserves the right to modify the implementation of communication interfaces and protocols at any time without notifying the user. It is the user's responsibility to determine whether the downloaded content is up to date and to comply with it. SMA shall not be held liable for any damage as well as any assumption of consequential costs for customer systems by SMA that may result from the user's failure to do so.

### Software Licenses

You will find the software licenses for the installed software modules on the Internet at [www.SMASolar.com](http://www.SMASolar.com).

### Trademarks

All trademarks are recognized, even if not explicitly identified as such.

Missing designations do not mean that a product or brand is not a registered trademark.

## SMA SOLAR TECHNOLOGY AG

Sonnenallee 1

34266 Niestetal

Germany

Tel. +49 561 9522-0

Fax +49 561 9522-100

[www.SMA.de](http://www.SMA.de)

E-mail: [info@SMA.de](mailto:info@SMA.de)

© 2022 SMA Solar Technology AG. All rights reserved.

# Table of Contents

<b>1</b>	<b>Information on this Document .....</b>	<b>5</b>
1.1	Validity .....	5
1.2	Target Group .....	5
1.3	Content and Structure of this Document .....	5
1.4	Levels of Warning Messages .....	5
1.5	Symbols in the Document .....	6
1.6	Typographies .....	6
1.7	Explanation of Used Terms and Abbreviations .....	6
1.8	Additional Information .....	7
<b>2</b>	<b>Safety .....</b>	<b>8</b>
2.1	Intended Use .....	8
2.2	Safety Information .....	9
<b>3</b>	<b>Product Description .....</b>	<b>10</b>
3.1	Modbus Protocol .....	10
3.2	SunSpec Modbus Profile for SMA Devices .....	10
3.3	System Topology .....	10
3.4	Addressing and Data Transmission in the Modbus Protocol .....	12
3.4.1	Unit IDs .....	12
3.4.2	Assignment of the SunSpec Modbus Registers to Unit IDs .....	12
3.4.3	Modbus Register Number, Register Width and Data Block .....	12
3.4.4	Data Transmission .....	13
3.5	Reading and Writing of Data .....	13
3.6	SunSpec Data Types and NaN Values .....	13
<b>4</b>	<b>Commissioning and Configuration .....</b>	<b>15</b>
<b>5</b>	<b>SunSpec Modbus Profile – Allocation Tables .....</b>	<b>16</b>
5.1	Information on Assignment Tables .....	16
5.2	Gateway (Unit ID = 125) .....	18
5.2.1	Table C 001 (Common Model) .....	18
5.2.2	Table NC011 (Ethernet Link Layer Model) .....	19
5.2.3	Table NC 012 (IPv4 Model) .....	19
5.2.4	Tables I 101, 102, 103 (Inverter Integer Map) .....	21
5.2.5	Table IC 120 (Inverter Controls Nameplate Ratings) .....	23
5.2.6	Table IC 121 (Inverter Controls Basic Settings) .....	25
5.2.7	Table IC 122 (Inverter Controls Extended Measurements) .....	29

5.2.8	Table IC 123 (Immediate Inverter Controls)	32
5.2.9	Table IC 124 (Basic Storage Controls)	34
5.2.10	Table IC 126 (Static Volt-VAR Arrays)	34
5.2.11	Table IC 127 (Parameterized Frequency-Watt)	35
5.2.12	Table IC 128 (Dynamic Reactive Current)	35
5.2.13	Table IC 131 (Watt-Power Factor)	36
5.2.14	Table IC 132 (Volt watt)	36
5.2.15	Table I 160 (Multiple MPPT Inverter Extension)	37
5.2.16	Table IC 129 (LVRT Must Disconnect)	37
5.2.17	Table IC 130 (HVRT Must Disconnect)	38
5.2.18	Table E 307 (Base Meteorological Model)	38
5.2.19	Table E 308 (Mini Met Model)	39
5.2.20	Table E 302 (Irradiance Model)	40
5.3	SUNNY TRIPOWER 60 / SUNNY HIGHPOWER PEAK1 (Unit ID = 126 to 168)	41
5.3.1	Table C 001 (Common Model)	41
5.3.2	Table NC011 (Ethernet Link Layer Model)	42
5.3.3	Table NC 012 (IPv4 Model)	42
5.3.4	Tables I 101, 102, 103 (Inverter Integer Map)	43
5.4	SUNNY TRIPOWER STORAGE 60 – Storage System Control Interface (Unit ID = 25)	48
5.4.1	Table SMA.SSC (Storage System Control)	49
5.4.2	Control Commands	53
5.5	Direct Marketer Interface (Unit ID = 200)	54
5.5.1	Table SMA.DM (Direct Marketing)	54
5.6	Manual Restart (Unit ID = 201)	55
5.6.1	Table SMA.MR (Manual Restart)	55
<b>6</b>	<b>Troubleshooting</b>	<b>56</b>
<b>7</b>	<b>Technical Data</b>	<b>59</b>
7.1	Modbus Communication Ports	59
7.2	Data Processing and Time Behavior	59
<b>8</b>	<b>Contact</b>	<b>60</b>

# 1 Information on this Document

## 1.1 Validity

This document is valid for:

- Inverters of the SUNNY TRIPOWER production series in the 60°kW power class (STP 60)
- Inverters of the SUNNY HIGHPOWER PEAK1 production series in the 75°kW power class (SHP 75)
- Inverters of the SUNNY TRIPOWER STORAGE production series in the 60°kW power class (STPs 60)
- SMA Inverter Manager

## 1.2 Target Group

The activities described in this document must only be performed by qualified persons. Qualified persons must have the following skills:

- Detailed knowledge of the grid management services
- Knowledge of IP-based network protocols
- Knowledge of the Modbus specifications
- Knowledge of the SunSpec Modbus specifications
- Training in the installation and configuration of IT systems
- Knowledge of and compliance with this document and all safety information

## 1.3 Content and Structure of this Document

This document describes the general functioning of the Modbus interface as well as the Modbus registers provided by the devices and the manufacturer-specific events and status for the SunSpec Modbus profile of the supported device types. The basis of this figure is the file **PICS.xls** contained in the version "SunSpec Specification from June 2013".

This document does not contain any details on the parameters and measured values provided by the inverter in detail (see technical information "Description of the operating parameters - SUNNY TRIPOWER 60 / SUNNY HIGHPOWER PEAK 1").

This document does not contain any information on software which can communicate with the Modbus interface (see the software manufacturer's manual).

## 1.4 Levels of Warning Messages

The following levels of warning messages may occur when handling the product.

**Symbol**

**Explanation**



Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

**ACHTUNG**

Indicates a situation which, if not avoided, can result in property damage.

## 1.5 Symbols in the Document

Symbol	Explanation
	Information that is important for a specific topic or goal, but is not safety-relevant.
<input type="checkbox"/>	Indicates a requirement for meeting a specific goal.

## 1.6 Typographies

Typography	Use	Example
<b>bold</b>	<ul style="list-style-type: none"> <li>File names</li> <li>Parameters</li> </ul>	<ul style="list-style-type: none"> <li>The file <b>PICS.xls</b></li> <li>The column <b>Typ</b></li> </ul>
>	<ul style="list-style-type: none"> <li>Connects several elements to be selected</li> </ul>	<ul style="list-style-type: none"> <li>Select <b>Settings &gt; Date.</b></li> </ul>
<b>[Button]</b> <b>[Key]</b>	<ul style="list-style-type: none"> <li>Button or key to be selected or pressed</li> </ul>	<ul style="list-style-type: none"> <li>Select <b>[Enter]</b>.</li> </ul>

## 1.7 Explanation of Used Terms and Abbreviations

### Terms

Complete designation	Designation in this document
Modbus register	Register
Photovoltaic system	PV system
SUNNY TRIPOWER STORAGE 60 inverter	STPS 60, inverter
SUNNY TRIPOWER 60 inverter	STP 60, inverter
SUNNY HIGHPOWER PEAK1 inverter	SHP 75, inverter

SMA Inverter Manager

Inverter Manager

## Abbreviations

Abbreviation	Designation	Explanation
LCS-Tool	Local Commissioning and Service tool	Configuration software for the Inverter Manager
PICS	Protocol Implementation Conformance Statement	SunSpec conforming summary of the data points of a particular device.

## 1.8 Additional Information

### SMA documents

Additional information is available at [www.SMA-Solar.com](http://www.SMA-Solar.com) (not all documents are available in all languages):

Document title	Document type
SUNNY TRIPOWER 60	Installation Manual
SUNNY HIGHPOWER PEAK1	Installation Manual
SUNNY TRIPOWER STORAGE 60	Installation Manual
SUNNY TRIPOWER 60 / SUNNY HIGHPOWER PEAK1 - Description of the Operating Parameters	Technical Information
SunSpec PlugFest Protocol Implementation Conformance Statement for the STP60 (PICS.xlsx)	Specification

### Additional documents

Document title	Source
Modbus Application Protocol Specification	<a href="http://www.modbus.org/specs.php">http://www.modbus.org/specs.php</a>
Modbus Messaging Implementation Guide	<a href="http://www.modbus.org/specs.php">http://www.modbus.org/specs.php</a>
SunSpec specifications	<a href="http://www.sunspec.org">http://www.sunspec.org</a>

## 2 Safety

### 2.1 Intended Use

The Modbus interface of the supported SMA devices is designed for industrial use and has the following tasks:

- Remote control of the grid management services of a PV system.
- Remote-controlled querying of the measured values of a PV system.
- Remote-controlled changing of the parameters of a PV system.

The Modbus interface can be used via Modbus TCP.

Use this product only in accordance with the information provided in the enclosed documentation and with the locally applicable standards and directives.

Any other application may cause personal injury or property damage.

Alterations to the product, e.g. modifications or conversions, are only permitted with the express written permission of SMA Solar Technology AG. Unauthorized alterations will void guarantee and warranty claims and in most cases terminate the operating license. SMA Solar Technology AG shall not be held liable for any damage caused by such alterations.

Any use of the product other than that described in the Intended Use section does not qualify as appropriate.

The enclosed documentation is an integral part of this product. Keep the documentation in a convenient place for future reference and observe all instructions contained therein.

## 2.2 Safety Information

This section contains safety information that must be observed at all times when working on or with the product.

To prevent personal injury and property damage and to ensure long-term operation of the product, read this section carefully and observe all safety information at all times.

### **ACHTUNG**

#### **Manipulation of PV system data in Ethernet networks**

You can connect the supported SMA products to the Internet. When connected to the Internet, there is a risk that unauthorized users can access and manipulate the data of your PV system.

- Set up a firewall.
- Close unnecessary network ports.
- If absolutely necessary, only enable remote access via a virtual private network (VPN).
- Do not use the port forwarding feature. This also applies to the used Modbus ports.
- Disconnect system components from other network components (network segmentation).

## 3 Product Description

### 3.1 Modbus Protocol

The Modbus Application Protocol is an industrial communication protocol that is currently used in the solar sector mainly for system communication in PV power plants.

The Modbus protocol has been developed for reading data from or writing data to clearly defined data areas. The Modbus specification does not prescribe what data is within which data area. The data areas must be defined device-specifically in Modbus profiles. With knowledge of the device-specific Modbus profile, a Modbus client (e.g. a SCADA system) can access the data of a Modbus server (e.g. SMA devices with Modbus interface).

The Modbus profile specially developed by SunSpec is the SunSpec Modbus profile.

The mapping of the data model of the inverter on the SunSpec data model is specified in the SunSpec Modbus profile.

### 3.2 SunSpec Modbus Profile for SMA Devices

The SunSpec Modbus profile from the SunSpec Alliance contains a comprehensive set of measured values and parameters for energy-generating devices in PV systems. SMA has performed a mapping of the special data points of the inverter on the data points required by SunSpec. The inverter therefore conforms with the SunSpec Modbus profile of the underlying specification version (see Section 1 "Information on this Document", P. 5).


The SunSpec Modbus profile for the inverter starts at the register number 40001 (see Section 3.4 "Addressing and Data Transmission in the Modbus Protocol", page 12).

### 3.3 System Topology

The Inverter Manager is connected with the SCADA system of the electric utility company or the grid operator and can thus communicate via the IP protocol. The IP interface also enables communication via the Modbus protocol. The inverters that are connected to the Inverter Manager via an SMA fieldbus are subordinate to the Inverter Manager.

From the perspective of the Modbus protocol, the Inverter Manager represents a Modbus slave that supports the SunSpec Modbus profile and provides a gateway to the inverter. The inverter can only be addressed using this gateway per unit ID.

**Example: PV system topology from the perspective of the SMA devices**

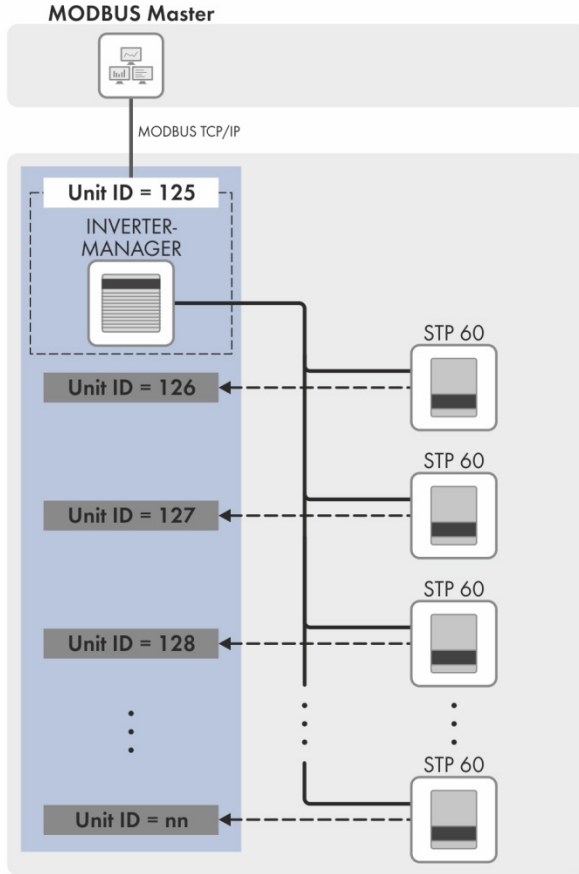

Line	Explanation
	IP network connection between SCADA system and Inverter Manager (PV system router)
	SMA fieldbus
	Logical assignment of inverter to unit ID

## 3.4 Addressing and Data Transmission in the Modbus Protocol

### 3.4.1 Unit IDs

The Unit ID is a superordinate addressing type in the Modbus protocol. The assignment of the unit IDs in the SunSpec Modbus profile for inverter is performed automatically by the Inverter Manager. You can determine the unit IDs assigned by the Inverter Manager for the connected inverter using the Local Commissioning and Service tool (LCS tool).

The following table shows an overview of the unit IDs in the SunSpec Modbus profile:

Unit ID	Explanation
125*	This unit ID is reserved for the Inverter Manager.
126 to 167*	The unit IDs from 126 to 167 are reserved for the inverter.

\*Deviation for firmware version < 1.45: Inverter Manager ID = 1; Inverter ID 2 to 43

### 3.4.2 Assignment of the SunSpec Modbus Registers to Unit IDs

The assignment of the parameters and measured values of the SMA devices to Modbus registers is achieved using assignment tables and is also shown in this document (see Section 5 "SunSpec Modbus Profile – Allocation Tables", page 16).

The assignment table "Gateway (Unit ID = 125)" contains the SunSpec Modbus registers that are provided by the Inverter Manager.

The assignment table (Unit ID = 126 to 167) contains a summary of the SunSpec Modbus registers supported by the inverter as well as a brief description of the register data.

### 3.4.3 Modbus Register Number, Register Width and Data Block

A Modbus register is 16 bits wide. For wider data items, connected Modbus registers are used and considered as data blocks. The number (CNT) of connected Modbus registers is indicated in the SunSpec assignment tables. The register number of the first Modbus register in a data block is the start address of the data block. The register numbering begins with 40001.



#### Offset of the Modbus register numbers (No.)

For the reading or writing of Modbus registers, use the register numbers reduced by the offset 1 in each case. Example: Modbus register address = register number in the SunSpec Modbus profile – offset = 40001 – 1 = 40000.

### 3.4.4 Data Transmission

In accordance with the Modbus specification, only a specific volume of data can be transported in a single data transmission in a simple protocol data unit (PDU). The data also contains function-dependent parameters such as the function code, start address or number of Modbus registers to be transmitted. The amount of data depends on the Modbus command used and has to be taken into account during data transmission. You can find the number of possible Modbus registers per command in section 3.5.

With data storage in the Motorola format "Big Endian", data transmission begins with the high byte and then the low byte of the Modbus register.

## 3.5 Reading and Writing of Data

The Modbus interface can be used via the protocol Modbus TCP. Using Modbus TCP enables read and write access (RW) to the Modbus register.

The following Modbus commands are supported by the implemented Modbus interface:

Modbus command	Hexadecimal value	Data volume (number of registers) <sup>1</sup>
Read holding registers	0x03	1 to 125
Read input registers	0x04	1 to 125
Write single register	0x06	1
Write multiple registers	0x10	1 to 123
Read-write multiple registers	0x17	Read: 1 to 125, Write: 1 to 121

## 3.6 SunSpec Data Types and NaN Values

The following table shows the data types used in the SunSpec Modbus profile and the possible NaN values. The SunSpec data types are listed in the **Type** column of the assignment tables. They describe the data width and the format of the data value saved at a register address. The format, such as bit field, describes how SunSpec data is to be interpreted. The formats are important, for example, for the displaying of data or for its further processing:

Type	Description	NaN value
acc32	Accumulated value (32 bit). Is used for all sequentially increasing values.	0x0000 0000

<sup>1</sup> Number of Modbus registers transferable as data block per command

acc64	Accumulated value (64 bit). Is used for all sequentially increasing values. Only positive values are permitted. The overflow of the number range takes place at 0x7FFF FFFF FFFF FFFF.	0x0000 0000 0000 0000
bitfield16	Bit field (16 bit). A combination of individual bits. Is used for multi-value alarm messages or status. Value range 0 to 0x7FFF. If the MSB is set in a bit field, all other bits are ignored.	0xFFFF
bitfield32	Bit field (32 bit). A combination of individual bits. Is used for multi-value alarm messages or status. Value range 0 to 0x7FFF FFFF. If the MSB is set in a bit field, all other bits are ignored.	0xFFFF FFFF
enum16	Number code (16 bit). The breakdown of the possible codes can be found directly under the designation of the Modbus register in the SunSpec Modbus profile assignment tables.	0xFFFF
int16	Signed integer (16 bit).	0x8000
int32	Signed integer (32 bit).	0x8000 0000
string	String (multiple of 2 bytes). A zero-terminating value or a value of fixed length.	0x0000 to nnnn
sunssf	SunSpec scale factor as signed integer (16 bit). Scale factors are used as exponents of a power of ten. Negative scale factors push the decimal point to the left, positive scale factors to the right.	0x8000
uint16	Unsigned integer (16 bit).	0xFFFF
uint32	Unsigned integer (32 bit).	0xFFFF FFFF
uint64	Unsigned integer (64 bit).	0xFFFF FFFF FFFF FFFF

## 4 Commissioning and Configuration

The Modbus TCP server of the Inverter Manager is enabled as default. The communication port in the Inverter Manager is set to 502 and can not be changed.

The Modbus interface can be used if all inverter devices connected to the Inverter Manager as well as the Inverter Manager itself have been commissioned (see the inverter installation manual).

## 5 SunSpec Modbus Profile – Allocation Tables

### 5.1 Information on Assignment Tables

In the assignment tables you will find the SunSpec Modbus register numbers which can be accessed under the corresponding unit ID. The tables provide the following information and are divided into the sections "Header" and "Fixed Block", in accordance with the PICS:

Information	Explanation
<b>No. (DEC)</b>	<p>Decimal register number (see also Section 3.4.2 "Assignment of the SunSpec Modbus Registers to Unit IDs</p> <p>The assignment of the parameters and measured values of the SMA devices to Modbus registers is achieved using assignment tables and is also shown in this document (see Section 5 "SunSpec Modbus Profile – Allocation Tables", page 16).</p> <p>The assignment table "Gateway (Unit ID = 125)" contains the SunSpec Modbus registers that are provided by the Inverter Manager.</p> <p>The assignment table (Unit ID = 126 to 167) contains a summary of the SunSpec Modbus registers supported by the inverter as well as a brief description of the register data.</p> <p>Modbus Register Number, Register Width and Data Block", page 12 onwards).</p>
<b>Description / Number code(s)</b>	<p>[SunSpec description of the Modbus register][{(SunSpec name of the Modbus register)} {&lt;, (SMA: SMA parameter designation)&gt;}{&lt;: Parameter&gt;}{&lt;: Number code(s)/bit(s), designation(s)/codes&gt;}</p> <p>The following description scheme is also used in the table sections "Fixed Block" and "Repeating Block":</p> <ul style="list-style-type: none"> <li>• [SunSpec description of the Modbus register] [(SunSpec name of the Modbus register)], &lt;Unit&gt;* 10<sup>SunSpec scale factor</sup> (Register address of the scale factor)&gt;, &lt;(SMA: SMA parameter designation):&lt;standard value&gt;</li> </ul> <p>For scale factors:</p> <ul style="list-style-type: none"> <li>• [Description of the scale factor (SunSpec scale factor): (integer)]</li> </ul> <p>Legend: [...] Mandatory entry, &lt;...&gt; Optional entry, {...} Parameter group</p>
<b>CNT (WORD)</b>	<p>Number of combined Modbus registers at this Modbus register number (No.).</p>

<b>Type</b>	Data type, e.g. uint32 = 32 bits without prefix (see Section 3, page 13).
<b>Access</b>	<p>Access type</p> <p>RO: Read only</p> <p>RW: Read and write</p> <p>If an access type is not allowed, a Modbus exception is generated in the event of access with an access type that is not allowed.</p>

### **Offset of the Modbus register numbers (No.)**

For the reading or writing of Modbus registers, use the register numbers reduced by the offset 1 in each case. Example: Modbus register address = register number in the SunSpec Modbus profile - offset = 40001 - 1 = 40000.

### **Reactive power in the SunSpec Modbus profile**

For all SunSpec Modbus registers of the Inverter Manager and of the inverter in which a reactive power is measured or specified, a positive reactive power is "lagging" and a negative reactive power is "leading" as per the IEC convention and generator reference-arrow system.

This information is valid for the following SunSpec Modbus registers: 40354 and 40359.

## 5.2 Gateway (Unit ID = 125)

In the following tables you will find the SunSpec Modbus registers provided by the gateway (Inverter Manager) that you can access under unit ID = 125. You can access the gateway via the IP address of the Inverter Manager:

### 5.2.1 Table C 001 (Common Model)

No. (DEC)	Description / Number code(s)	CNT (WORD)	Type	Access
Header:				
40001	SunSpec ID (SID): 0x53756e53 = SunSpec Modbus Map	2	uint32	RO
40003	Model ID (ID): 1 = SunSpec common model	1	uint16	RO
40004	Number of the following Modbus registers in accordance with the PICS table (L): 66	1	uint16	RO
Fixed block:				
40005	Manufacturer (Mn): "SMA"	16	string	RO
40021	Model (Md): "SMA Inverter Manager"	16	string	RO
40037	Options (Opt): "Inverter Manager Name"	8	string	RO
40045	Version (Vr): Version number of the installed firmware.	8	string	RO
40053	Serial number (SN) of the device that uses the Modbus unit ID stored in the following register.	16	string	RO
40069	Modbus unit ID of the device (DA): 125: Inverter Manager	1	uint16	RO
40070	Padding register (Pad): NAN	1	pad	RO

## 5.2.2 Table NC011 (Ethernet Link Layer Model)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40071	Model ID (ID): 11 = SunSpec Ethernet link layer model	1	uint16	RO
40072	Number of the following Modbus registers in accordance with the PICS table (L): 13	1	uint16	RO



NC 011 block was included for reasons of compatibility and only contains NaN values in the registers 40073 to 40085

## 5.2.3 Table NC 012 (IPv4 Model)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40086	Model ID (ID): 12 = SunSpec IPv4 model	1	uint16	RO
40087	Number of the following Modbus registers in accordance with the PICS table (L): 98	1	uint16	RO
Fixed block:				
40088	Interface name (Name): NaN	4	string	RO
40092	Config status (CfgSt): NaN	1	enum16	RO
40093	Change status (ChgSt): NaN	1	bitfield16	RO
40094	Config capability (Cap): NaN	1	bitfield16	RO
40095	IPv4 Config (Cfg): NaN	1	enum16	RO

40096	Control (Ctl) : NaN	1	enum16	RO
40097	IP address (Addr)	8	string	RO
40105	Network mask (Msk)	8	string	RO
40113	Gateway address (Gw)	8	string	RO
40121	DNS1: NaN	8	string	RO
40129	DNS2: NaN	8	string	RO
40137	NTP1: NaN	12	string	RO
40149	NTP2: NaN	12	string	RO
40161	Domain (DomNam): NaN	12	string	RO
40173	Host Name (HostNam): NaN	12	string	RO
40185	Pad: : NaN	1	pad	RO



NC 012 block was included for reasons of compatibility and only contains NaN values in the registers 40088 to 40185

## 5.2.4 Tables I 101, 102, 103 (Inverter Integer Map)



### Accumulation of the values

The Inverter Manager can be considered as a virtual inverter that combines the individual measured values of the inverters, where useful.

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40186	Model ID (ID): 103 = SunSpec inverter model (phsABC)	1	uint16	RO
40187	Number of the following Modbus registers in accordance with the PICS table (L): 50	1	uint16	RO
Fixed block:				
40188	AC current (A), in $A_{-SF}^{A}$ (40192): sum of all inverters	1	uint16	RO
40189	Current, line conductor L1 (AphA), in $A_{-SF}^{A}$ (40192) : sum of all inverters	1	uint16	RO
40190	Current, line conductor L2 (AphB), in $A_{-SF}^{A}$ (40192) : sum of all inverters	1	uint16	RO
40191	Current, line conductor L3 (AphC), in $A_{-SF}^{A}$ (40192) : sum of all inverters	1	uint16	RO
40192	Scale factor current ( $A_{-SF}$ ): -1	1	sunssf	RO
40193	Voltage, line conductor L1 to L2 (PPVphAB), in $V_{-SF}^{V}$ (40199) : average value of all inverters	1	uint16	RO
40194	Voltage, line conductor L2 to L3 (PPVphBC), in $V_{-SF}^{V}$ (40199) : average value of all inverters	1	uint16	RO
40195	Voltage, line conductor L3 to L1 (PPVphCA), in $V_{-SF}^{V}$ (40199) : average value of all inverters	1	uint16	RO
40196	Voltage, line conductor L1 to N (PPVphA), in $V_{-SF}^{V}$ (40199) : average value of all inverters	1	uint16	RO

40197	Voltage, line conductor L2 to N (PPVphB), in $V_{-SF}^{V}$ (40199) : average value of all inverters	1	uint16	RO
40198	Voltage, line conductor L3 to N (PPVphC), in $V_{-SF}^{V}$ (40199) : average value of all inverters	1	uint16	RO
40199	Scale factor voltage ( $V_{-SF}$ ): -1	1	sunssf	RO
40200	Active power (W), in $W_{-SF}^{W}$ (40201): sum of all inverters	1	int16	RO
40201	Scale factor active power ( $W_{-SF}$ ): 2	1	sunssf	RO
40202	Power frequency (Hz), in $Hz_{-SF}^{Hz}$ (40203): Average value of all inverters	1	uint16	RO
40203	Scale factor power frequency ( $Hz_{-SF}$ ): -3	1	sunssf	RO
40204	Apparent power (VA), in $VA_{-SF}^{VA}$ (40205) sum of all inverters	1	int16	RO
40205	Scale factor apparent power ( $VA_{-SF}$ ): 2	1	sunssf	RO
40206	Reactive power (VAR), in $var_{-SF}^{VAR}$ (40207) sum of all inverters	1	int16	RO
40207	Scale factor reactive power ( $VAR_{-SF}$ ): 2	1	sunssf	RO
40208	Displacement power factor $\cos \varphi$ (PF) $PF_{-SF}^{PF}$ (40209): Average value of all inverters	1	int16	RO
40209	Scale factor displacement power factor ( $PF_{-SF}$ ): -2	1	sunssf	RO
40210	Total yield (WH), in $Wh_{-SF}^{WH}$ (40212): sum of all inverters	2	acc32	RO
40212	Scale factor total yield ( $WH_{-SF}$ ): 3	1	sunssf	RO
40213	DC current (DCA), in $A_{-SF}^{DCA}$ (40214): average value of all inverters	1	uint16	RO
40214	Scale factor DC current ( $DCA_{-SF}$ ): -1	1	sunssf	RO
40215	DC voltage (DCV), in $A_{-SF}^{DCV}$ (40216): average value of all inverters	1	uint16	RO
40216	Scale factor DC voltage ( $DCV_{-SF}$ ): -1	1	sunssf	RO
40217	DC power (DCW), in $W_{-SF}^{DCW}$ (40218): sum of all inverters	1	int16	RO
40218	Scale factor DC power ( $DCW_{-SF}$ ): 2	1	sunssf	RO

40219	Internal temperature (TmpCab), in °C <sup>Temp_SF</sup> (40223): average value of all inverters	1	int16	RO
40220	Heat sink temperature (TmpSnk), in °C <sup>Temp_SF</sup> (40223): average value of all inverters	1	int16	RO
40221	Transformer temperature (TmpTrns), in °C <sup>Temp_SF</sup> (40223): NaN	1	int16	RO
40222	Other temperature (TmpOt), in °C * 10 <sup>Temp_SF</sup> (40223): NaN	1	int16	RO
40223	Scale factor temperature (Tmp_SF): -1	1	sunssf	RO
40224	Operating status (St): NaN	1	enum16	RO
40225	Manufacturer-specific status code (StVnd): highest error code not equal to 60, otherwise 60, description see Register 40225 section 5.3.4	1	uint16	RO
40226	Event number (Evt1): NaN	2	bitfield32	RO
40228	Event number (Evt2): NaN	2	bitfield32	RO
40230	Manufacturer-specific event code (EvtVnd1): NaN	2	bitfield32	RO
40232	Manufacturer-specific event code (EvtVnd2): NaN	2	bitfield32	RO
40234	Manufacturer-specific event code (EvtVnd3): NaN	2	bitfield32	RO
40236	Manufacturer-specific event code (EvtVnd4): NaN	2	bitfield32	RO

## 5.2.5 Table IC 120 (Inverter Controls Nameplate Ratings)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
--------------	---------------------------	---------------	------	--------

Header:				
40238	Model ID (ID): 120 = SunSpec nameplate model	1	uint16	RO
40239	Number of the following Modbus registers in accordance with the PICS table (L): 26	1	uint16	RO
Fixed block:				
40240	DER type (DERTyp): 4 = PV device	1	enum16	RO
40241	Continuous active power capability (WRtg), in $W^{WRtg\_SF}$ (40242), (SMA: SGridNom*P_LIM_IF_Q).	1	uint16	RO
40242	Scale factor continuous active power capability (WRtg_SF): 3	1	sunssf	RO
40243	Continuous apparent power capability (VARtg) in $VA^{VARtg\_SF}$ (40244), (SMA: SGridNom).	1	uint16	RO
40244	Scale factor continuous apparent power capability (VARtg_SF): 3	1	sunssf	RO
40245	Continuous reactive power capability in quadrant 1 (VARtgQ1), in $var^{VARtg\_SF}$ (40249), (SMA: SGridNom).	1	int16	RO
40246	Continuous reactive power capability in quadrant 2 (VARtgQ2), in $var^{VARtg\_SF}$ (40249).	1	int16	RO
40247	Continuous reactive power capability in quadrant 3 (VARtgQ3), in $var^{VARtg\_SF}$ (40249).	1	int16	RO
40248	Continuous reactive power capability in quadrant 4 (VARtgQ4), in $var^{VARtg\_SF}$ (40249), (SMA: SGridNom).	1	int16	RO
40249	Scale factor continuous reactive power capability (VARtg_SF): 3	1	sunssf	RO
40250	Continuous RMS current capability (ARtg), in $A^{ARtg\_SF}$ (40251), (SMA: SgridNom/(sqrt(3)*Unom_LL)).	1	uint16	RO
40251	Scale factor continuous RMS current capability (Artg_Rtg): -2	1	sunssf	RO
40252	Minimum displacement power factor capability in Q 1 ((PFRtgQ1) <sup>PFRtg_SF</sup> (40256)).	1	int16	RO

40253	Minimum displacement power factor capability in Q 2 ((PFRtgQ2) <sup>PFRtg_SF</sup> (40256).	1	int16	RO
40254	Minimum displacement power factor capability in Q 3 ((PFRtgQ3) <sup>PFRtg_SF</sup> (40256).	1	int16	RO
40255	Minimum displacement power factor capability in Q 4 ((PFRtgQ4) <sup>PFRtg_SF</sup> (40256).	1	int16	RO
40256	Scale factor minimum displacement power factor capability (PFRtg_SF): -4	1	sunssf	RO
40257	Nominal capacity of the storage device (WHRtg), in Wh <sup>WHRtg_SF</sup> (40258): NaN	1	uint16	RO
40258	Scale factor nominal capacity (WHRtg_SF): NaN	1	sunssf	RO
9	Usable Ah capacity of the battery (AhrRtg), in Ah <sup>AhrRtg_SF</sup> (40260): NaN	1	uint16	RO
40260	Scale factor usable Ah capacity (AhrRtg_SF): NaN	1	sunssf	RO
	Maximum energy transfer rate to the storage device (MaxChaRte), in W <sup>MaxChaRte_SF</sup> (40262): NaN	1	uint16	RO
40262	Scale factor maximum energy transfer rate to the storage device (MaxChaRte_SF): NaN	1	sunssf	RO
40263	Maximum energy transfer rate from the storage device (Max- DisChaRte), in W <sup>MaxDisChaRte_SF</sup> (40264): NaN	1	uint16	RO
40264	Scale factor maximum energy transfer rate from the storage de- vice (MaxDisChaRte_SF): NaN	1	sunssf	RO
40265	Padding register	1	pad	RO

## 5.2.6 Table IC 121 (Inverter Controls Basic Settings)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40266	Model ID (ID):	1	uint16	RO

121 = SunSpec basic settings model					
40267	Number of the following Modbus registers in accordance with the PICS table (L): 30	1	uint16	RO	
Fixed block:					
40268	Setting for maximum output active power ( $W_{Max}$ ), in $W^{W_{Max}_{SF}}$ (40288), (SMA: $S_{GridNom} * P_{LIM\_IF\_Q}$ ).	1	uint16	RO	
40269	Voltage at the PCC (VRef), in $V^{V_{Ref}_{SF}}$ (40289), (SMA: UNOM_LL).	1	uint16	RW	
40270	Offset between PCC and inverter (VRefOfs), in $V^{V_{RefOfs}_{SF}}$ (40290), (SMA: UNOMOFFSET).	1	int16	RW	
40271	Set value for maximum voltage (VMax), in $V^{V_{MinMax}_{SF}}$ (40291): NaN	1	uint16	RO	
40272	Set value for minimum voltage (VMin), in $V^{V_{MinMax}_{SF}}$ (40291): NaN	1	uint16	RO	
40273	Set value for maximum apparent power (VAMax), in $VA^{VA_{Max}_{SF}}$ (40292): NaN	1	uint16	RO	
40274	Maximum reactive power in Q 1 (VArMaxQ1), in $var^{VAr_{Max}_{SF}}$ (40293): NaN	1	int16	RO	
40275	Maximum reactive power in Q 2 (VArMaxQ2), in $var^{VAr_{Max}_{SF}}$ (40293): NaN	1	int16	RO	
40276	Maximum reactive power in Q 3 (VArMaxQ3), in $var^{VAr_{Max}_{SF}}$ (40293): NaN	1	int16	RO	
40277	Maximum reactive power in Q 4 (VArMaxQ4), in $var^{VAr_{Max}_{SF}}$ (40293): NaN	1	int16	RO	
40278	Standard active power increase rate (WGra), in % of ( $W_{Max}/min$ ) $^{W_{Gra}_{SF}}$ (40294): NaN	1	uint16	RO	
40279	Set value for minimum power factor in Q 1 (PFMinQ1) $^{PF_{Min}_{SF}}$ (40295): NaN	1	int16	RO	
40280	Set value for minimum power factor in Q 2 (PFMinQ2) $^{PF_{Min}_{SF}}$ (40295): NaN	1	int16	RO	

40281	Set value for minimum power factor in Q 3 (PFMinQ3) <sup>PFMin_SF</sup> (40295): NaN	1	int16	RO
40282	Set value for minimum power factor in Q 4 (PFMinQ4) <sup>PFMin_SF</sup> (40295): NaN	1	int16	RO
40283	VAr action when changing between charging and discharging (VArAct): NaN 1 = Change excitation type 2 = Do not change excitation type	1	enum16	RO
40284	Calculation method for total apparent power (ClcTotVA): NaN 1 = vectorial 2 = arithmetic	1	enum16	RO
40285	Relative maximum ramp-up rate (MaxRmpRte), in % of WGra- MaxRmpRte_SF (40296): NaN	1	uint16	RO
40286	Set value for nominal frequency (ECPNomHz), in Hz <sup>ECPNomHz_SF</sup> (40297): NaN	1	uint16	RO
40287	Identity of the line conductor in single-phase inverters (ConnPh): NaN 1 = Line conductor L1 2 = Line conductor L2 3 = Line conductor L3	1	enum16	RO
40288	Scale factor for output active power (WMax_SF): 3	1	sunssf	RO
40289	Scale factor reference voltage (VRef_SF): -2	1	sunssf	RO
40290	Scale factor for offset (VRefOfs_SF): NaN	1	sunssf	RO
40291	Scale factor maximum and minimum voltage (VMinMax_SF): NaN	1	sunssf	RO
40292	Scale factor apparent power (VAMax_SF): NaN	1	sunssf	RO
40293	Scale factor reactive power (VArMax_SF): NaN	1	sunssf	RO
40294	Scale factor active power increase rate (WGra_SF): NaN	1	sunssf	RO
40295	Scale factor minimum power factor (PFMin_SF): NaN	1	sunssf	RO
40296	Scale factor maximum relative increase rate (MaxRmpRte_SF): NaN	1	sunssf	RO

---

40297	Scale factor nominal frequency (ECPNomHz_SF): NaN	1	sunssf	RO
-------	---	---	--------	----

---

## 5.2.7 Table IC 122 (Inverter Controls Extended Measurements)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40298	Model ID (ID): 122 = SunSpec measurements status model	1	uint16	RO
40299	Number of the following Modbus registers in accordance with the PICS table (L): 44	1	uint16	RO
Fixed block:				
40300	PV inverter availability status (PVConn): NaN Bit 0 = Connected Bit 1 = Available Bit 2 = In operation	1	bitfield16	RO
40301	Battery inverter availability status (StorConn): NaN Bit 0 = Connected Bit 1 = Available Bit 2 = In operation	1	bitfield16	RO
40302	ECP connection status (ECPConn): NaN Bit 0 = Connected	1	bitfield16	RO
40303	Total active power yield (ActWh), in Wh: NaN = 65536	4	acc64	RO
40307	Total apparent power yield (ActVAh), in VAh = 65536	4	acc64	RO
40311	Total reactive power yield in Q 1 (ActVArhQ1), in varh: NaN = 65536	4	acc64	RO
40315	Total reactive power yield in Q 2 (ActVArhQ2), in varh: NaN = 65536	4	acc64	RO
40319	Total reactive power yield in Q 3 (ActVArhQ3), in varh: NaN = 65536	4	acc64	RO
40323	Total reactive power yield in Q 4 (ActVArhQ4), in varh: NaN = 65536	4	acc64	RO
40327	Reactive power available independently of active power (VArAval), in var <sup>VArAval_SF</sup> (40328): NaN	1	int16	RO

40328	Scale factor independently available reactive power (VArAval_SF): NaN	1	sunssf	RO			
40329	Available reactive power (WAval), in var <sup>WArAval_SF</sup> (40330): NaN	1	uint16	RO			
40330	Scale factor available reactive power (WAval_SF): NaN	1	sunssf	RO			
	Indicators for thresholds reached (StSetLimMsk): NaN						
	0 = WMax						
	1 = VAMax						
	2 = VArAval						
	3 = VArMaxQ1						
40331	4 = VArMaxQ2	2	bitfield32	RO			
	5 = VArMaxQ3						
	6 = VArMaxQ4						
	7 = PFMinQ1						
	8 = PFMinQ2						
	9 = PFMinQ3						
	10 = PFMinQ4						
	Indicators for currently active inverter controls (StActCtl): NaN						
	0 = FixedW						
	1 = FixedVAR						
	2 = FixedPF						
	3 = Volt VAr						
	4 = Freq watt param						
	5 = Freq watt curve						
40333	6 = Dyn reactive current	2	bitfield32	RO			
	7 = LVRT						
	8 = HVRT						
	9 = Watt PF						
	10 = Volt watt						
	12 = Scheduled						
	13 = LFRT						
	14 = HFRT						
40335	Used time synchronization source (TmSrc), as a URL: NaN	4	string	RO			
40339	Seconds since 2000-01-01 00:00 UTC (Tms), in s. NaN	2	uint32	RO			

	Indicator for currently active grid support procedure(s) (RtSt): NaN			
40341	0 = LVRT_ACTIVE 1 = HVRT_ACTIVE 2 = LFRT_ACTIVE 3 = HFRT_ACTIVE	1	bitfield16	RO
40342	Insulation resistance (Ris), in $\Omega^{\text{Ris\_SF}}$ (40343): NaN	1	uint16	RO
40343	Scale factor insulation resistance (Ris_SF): NaN	1	sunssf	RO

## 5.2.8 Table IC 123 (Immediate Inverter Controls)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40344	Model ID (ID): 123 = SunSpec immediate controls model	1	uint16	RO
40345	Number of the following Modbus registers in accordance with the PICS table (L): 24	1	uint16	RO
Fixed block:				
40346	Time period for grid connection / disconnection (Conn_WinTms), in s: NaN	1	uint16	RO
40347	Interval for grid connection / disconnection (Conn_RvrtTms), in s: NaN	1	uint16	RO
40348	Status grid connection (Conn), (SMA: ReleaseToStart): 0 = Disconnect 1 = Connect	1	enum16	RW
40349	Set power to default value (WMaxLimPct), in % of $WMax^{WMax}$ LimPct_SF (40367), (SMA: Pref).	1	int16	RW
40350	Time period for change of the power limitation (WMax-LimPct_WinTms), in s: NaN	1	uint16	RO
40351	Permitted reaction time for change of the power limitation (WMaxLimPct_RvrtTms), in s: NaN	1	uint16	RO
40352	Ramp-up time for change from current to new set value (WMax-LimPct_RmpTms), in s: NaN	1	uint16	RO
40353	Limiting (WMaxLim_Ena): 0 = Deactivated 1 = Activated	1	enum16	RO
40354	Set power factor to a certain value (OutPFSet) <sup>OutPFSet_SF</sup> (40368), (SMA: PF ref).	1	int16	RW

40355	Time period for change of the power factor (OutPFSet_WinTms), in s: NaN	1	uint16	RO
40356	Permitted reaction time for change of the power factor (OutPFSet_RvrtTms), in s: NaN	1	uint16	RO
40357	Ramp-up time for change from current to new set value (OutPFSet_RmpTms), in s: NaN	1	uint16	RO
40358	Fixed power factor (OutPFSet_Ena), (SMA: Pfect): 0 = Deactivated 1 = Activated	1	enum16	RW
40359	Reactive power (VArWMaxPct), in % of WMax <sup>VArPct_SF</sup> (40369), (SMA: Qref).	1	int16	RW
40360	Reactive power (VArMaxPct), in % of VarMax <sup>VArPct_SF</sup> (40369): NaN	1	int16	RO
40361	Reactive power (VArAvalPct), in % of VArAval <sup>VArPct_SF</sup> (40369): NaN	1	int16	RO
40362	Time period for change of the apparent power limitation (VArPct_WinTms), in s: NaN	1	uint16	RO
40363	Permitted reaction time for change of the apparent power limitation (VArPct_RvrtTms), in s: NaN	1	uint16	RO
40364	Ramp-up time for change from current to new set value (VArPct_RmpTms), in s: NaN	1	uint16	RO
40365	Mode of the percentile reactive power limitation (VArPct_Mod): 1 = in % of WMax	1	enum16	RO
40366	Control of the percentile reactive power limitation (VArPct_Ena), (SMA: Qext): 1 = activated	1	enum16	RW
40367	Scale factor power specification value (WMaxLimPct_SF): -2	1	sunssf	RO
40368	Scale factor power factor (OutPFSet_SF): -4	1	sunssf	RO
40369	Scale factor reactive power (VArPct_SF): -2	1	sunssf	RO

### 5.2.9 Table IC 124 (Basic Storage Controls)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40370	Model ID (ID): 124 = SunSpec Storage Model	1	uint16	RO
40371	Number of the following Modbus registers in accordance with the PICS table (L): 24	1	uint16	RO



IC 124 block was included for reasons of compatibility and only contains NaN values in the registers 40372 to 40395

### 5.2.10 Table IC 126 (Static Volt-VAR Arrays)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40396	Model ID (ID): 126 = SunSpec Static Volt-VAR Model	1	uint16	RO
40397	Number of the following Modbus registers in accordance with the PICS table (L): 64	1	uint16	RO



IC 126 block was included for reasons of compatibility and only contains NaN values in the registers 40398 to 40461

### 5.2.11 Table IC 127 (Parameterized Frequency-Watt)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40462	Model ID (ID): 127 = SunSpec Freq-Watt Param Model	1	uint16	RO
40463	Number of the following Modbus registers in accordance with the PICS table (L): 10	1	uint16	RO



IC 127 block was included for reasons of compatibility and only contains NaN values in the registers 40464 to 40473

### 5.2.12 Table IC 128 (Dynamic Reactive Current)


No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40474	Model ID (ID): 128 = SunSpec Dynamic Reactive Current Model	1	uint16	RO
40475	Number of the following Modbus registers in accordance with the PICS table (L): 14	1	uint16	RO



IC 128 block was included for reasons of compatibility and only contains NaN values in the registers 40476 to 40489


### 5.2.13 Table IC 131 (Watt-Power Factor)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40490	Model ID (ID): 131 = SunSpec Watt-PF Model	1	uint16	RO
40491	Number of the following Modbus registers in accordance with the PICS table (L): 64	1	uint16	RO

 IC 131 block was included for reasons of compatibility and only contains NaN values in the registers 40492 to 40555

### 5.2.14 Table IC 132 (Volt watt)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40556	Model ID (ID): 132 = SunSpec Volt-Watt Model	1	uint16	RO
40557	Number of the following Modbus registers in accordance with the PICS table (L): 64	1	uint16	RO

 IC 132 block was included for reasons of compatibility and only contains NaN values in the registers 40558 to 40621

### 5.2.15 Table I 160 (Multiple MPPT Inverter Extension)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40622	Model ID (ID): 160 = SunSpec Multiple MPPT Inverter Extension Model	1	uint16	RO
40623	Number of the following Modbus registers in accordance with the PICS table (L): 128	1	uint16	RO



IC 160 block was included for reasons of compatibility and only contains NaN values in the registers 40624 to 40750

### 5.2.16 Table IC 129 (LVRT Must Disconnect)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40752	Model ID (ID): 129 = SunSpec LVRTD Model	1	uint16	RO
40753	Number of the following Modbus registers in accordance with the PICS table (L): 60	1	uint16	RO



IC 129 block was included for reasons of compatibility and only contains NaN values in the registers 40754 to 40813

### 5.2.17 Table IC 130 (HVRT Must Disconnect)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40814	Model ID (ID): 130 = SunSpec HVRTD Model	1	uint16	RO
40815	Number of the following Modbus registers in accordance with the PICS table (L): 60	1	uint16	RO



IC 130 block was included for reasons of compatibility and only contains NaN values in the registers 40816 to 40875

### 5.2.18 Table E 307 (Base Meteorological Model)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40876	Model ID (ID): 307 = SunSpec Base Met Model	1	uint16	RO
40877	Number of the following Modbus registers in accordance with the PICS table (L): 11	1	uint16	RO
Fixed block:				
40878	Ambient temperature (TmpAmb): values in degrees Celsius (°C)	1	int16	RO
40879	Relative humidity (RH): NaN	1	int16	RO
40880	Barometric pressure (Pres): NaN	1	int16	RO
40881	Wind speed (WndSpd): value in m/s	1	int16	RO
40882	Wind direction (WndDir): value in degrees (°)	1	int16	RO

40883	Rainfall (Rain): NaN	1	int16	RO
40884	Snow depth (Snw): NaN	1	int16	RO
40885	Precipitation type (PPT): NaN	1	int16	RO
40886	Electric field (ElecFld): NaN	1	int16	RO
40887	Surface wetness (SurWet): NaN	1	int16	RO
40888	Soil wetness (SoilWet): NaN	1	int16	RO

### 5.2.19 Table E 308 (Mini Met Model)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40889	Model ID (ID): 308 = SunSpec Mini Met Model	1	uint16	RO
40890	Number of the following Modbus registers in accordance with the PICS table (L): 4	1	uint16	RO
Fixed block:				
40891	Global horizontal irradiance (GHI): value in W/m <sup>2</sup>	1	uint16	RO
40892	Back of module temperature (TmpBOM): value in degrees Celsius (°C)	1	int16	RO
40893	Ambient temperature (TmpAmb): values in degrees Celsius (°C)	1	int16	RO
40894	Wind speed (WndSpd): value in m/s	1	uint16	RO

## 5.2.20 Table E 302 (Irradiance Model)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40895	Model ID (ID): 302 = Irradiance Model	1	uint16	RO
40896	Number of the following Modbus registers in accordance with the PICS table (L): 5	1	uint16	RO
Fixed block:				
40897	Global horizontal irradiance (GHI): value in W/m <sup>2</sup>	1	uint16	RO
40898	Plane-of-array irradiance (POAI): value in W/m <sup>2</sup>	1	uint16	RO
40899	Diffuse irradiance (DFI): NaN	1	uint16	RO
40900	Direct normal irradiance (DNI): NaN	1	uint16	RO
40901	Other irradiance (OTI): NaN	1	uint16	RO

## 5.3 SUNNY TRIPOWER 60 / SUNNY HIGHPOWER PEAK I (Unit ID = 126 to 168)


You will find a summary of the SunSpec Modbus registers supported by the inverter as well as a brief description of the register data in the Technical Information "SunSpec Modbus Interface" at [www.SMA-Solar.com](http://www.SMA-Solar.com).

### 5.3.1 Table C 001 (Common Model)

No. (DEC)	Description / Number code(s)	CNT (WORD)	Type	Access
Header:				
40001	SunSpec ID (SID): 0x53756e53 = SunSpec Modbus Map	2	uint32	RO
40003	Model ID (ID): 1 = SunSpec common model	1	uint16	RO
40004	Number of the following Modbus registers in accordance with the PICS table (L): 66	1	uint16	RO
Fixed block:				
40005	Manufacturer (Mn): "SMA"	16	string	RO
40021	Model (Md): "STP60 / SHP75 / STPS"	16	string	RO
40037	Options (Opt): "Inverter name"	8	string	RO
40045	Version (Vr): Version number of the installed firmware.	8	string	RO
40053	Serial number (SN) of the device that uses the Modbus unit ID stored in the following register.	16	string	RO
40069	Modbus unit ID of the device (DA): 126 to 167, corresponding to STP60 / SHP75 / STPS 1 to 42	1	uint16	RO
40070	Padding register	1	pad	RO


### 5.3.2 Table NC011 (Ethernet Link Layer Model)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40071	Model ID (ID): 11 = SunSpec Ethernet link layer model	1	uint16	RO
40072	Number of the following Modbus registers in accordance with the PICS table (L): 13	1	uint16	RO

 NC 011 block was included for reasons of compatibility and only contains NaN values in the registers 40073 to 40085

### 5.3.3 Table NC 012 (IPv4 Model)

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
40086	Model ID (ID): 12 = SunSpec IPv4 model	1	uint16	RO
40087	Number of the following Modbus registers in accordance with the PICS table (L): 98	1	uint16	RO

 NC 012 block was included for reasons of compatibility and only contains NaN values in the registers 40088 to 40185

### 5.3.4 Tables I 101, 102, 103 (Inverter Integer Map)

The following table is valid for each of the three connection models (Model ID). For the inverter, the table with ID = 103 is applicable.

#### Descriptions of the event IDs

For detailed descriptions of the operating status of the register 40225 as well as of the event IDs of the registers 40230 to 40236, refer to the inverter installation manual.

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
Header:				
Model ID (ID):				
40186	101 = SunSpec inverter model (phsA, phsB, phsC) 102 = SunSpec inverter model (phsAB, phsAC, phsBC) 103 = SunSpec inverter model (phsABC)	1	uint16	RO
40187	Number of the following Modbus registers in accordance with the PICS table (L): 50	1	uint16	RO
Fixed block:				
40188	AC current (A), in $A^{A\_SF}$ (40192).	1	uint16	RO
40189	Current, line conductor L1 (AphA), in $A^{A\_SF}$ (40192).	1	uint16	RO
40190	Current, line conductor L2 (AphB), in $A^{A\_SF}$ (40192).	1	uint16	RO
40191	Current, line conductor L3 (AphC), in $A^{A\_SF}$ (40192).	1	uint16	RO
40192	Scale factor current (A_SF): -2	1	sunssf	RO
40193	Voltage, line conductor L1 to L2 (PPVphAB), in $V^{V\_SF}$ (40199).	1	uint16	RO
40194	Voltage, line conductor L2 to L3 (PPVphBC), in $V^{V\_SF}$ (40199).	1	uint16	RO

40195	Voltage, line conductor L3 to L1 (PPVphCA), in $V_{-SF}^{V-SF}$ (40199).	1	uint16	RO
40196	Voltage, line conductor L1 to N (PhVphA), in $V_{-SF}^{V-SF}$ (40199).	1	uint16	RO
40197	Voltage, line conductor L2 to N (PhVphB), in $V_{-SF}^{V-SF}$ (40199).	1	uint16	RO
40198	Voltage, line conductor L3 to N (PhVphC), in $V_{-SF}^{V-SF}$ (40199).	1	uint16	RO
40199	Scale factor voltage (V_SF): -1	1	sunssf	RO
40200	Active power (W), in $W_{-SF}^{W-SF}$ (40201).	1	int16	RO
40201	Scale factor active power (W_SF): 1	1	sunssf	RO
40202	Power frequency (Hz), in $Hz_{-SF}^{Hz-SF}$ (40203).	1	uint16	RO
40203	Scale factor power frequency (Hz_SF): -1	1	sunssf	RO
40204	Apparent power (VA), in $VA_{-SF}^{VA-SF}$ (40205).	1	int16	RO
40205	Scale factor apparent power (VA_SF): 1	1	sunssf	RO
40206	Reactive power (VAR), in $var_{-SF}^{VAR-SF}$ (40207).	1	int16	RO
40207	Scale factor reactive power (VAR_SF): 1	1	sunssf	RO
40208	Displacement power factor $\cos \phi$ (PF) $PF_{-SF}^{PF-SF}$ (40209).	1	int16	RO
40209	Scale factor displacement power factor (PF_SF): -1	1	sunssf	RO
40210	Total yield (WH), in $Wh_{-SF}^{WH-SF}$ (40212).	2	acc32	RO
40212	Scale factor total yield (WH_SF): 0	1	sunssf	RO
40213	DC current (DCA), in $A_{-SF}^{DCA-SF}$ (40214).	1	uint16	RO
40214	Scale factor DC current (DCA_SF): -2	1	sunssf	RO
40215	DC voltage (DCV), in $A_{-SF}^{DCV-SF}$ (40216)	1	uint16	RO
40216	Scale factor DC voltage (DCV_SF): -1	1	sunssf	RO
40217	DC power (DCW), in $W_{-SF}^{DCW-SF}$ (40218).	1	int16	RO

40218	Scale factor DC power (DCW_SF): 1	1	sunssf	RO
40219	Internal temperature (TmpCab), in °C <sup>Tmp_SF</sup> (40223)	1	int16	RO
40220	Heat sink temperature (TmpSnk), in °C <sup>Tmp_SF</sup> (40223)	1	int16	RO
40221	Transformer temperature (TmpTrns), in °C <sup>Tmp_SF</sup> (40223): NaN	1	int16	RO
40222	Other temperature (TmpOt), in °C <sup>Tmp_SF</sup> (40223): NaN	1	int16	RO
40223	Scale factor temperature (Tmp_SF): 0	1	sunssf	RO
40224	Operating status (St): NaN	1	enum16	RO

Manufacturer-specific status code (StVnd):

		<b>Status code (dec)</b>	<b>Description</b>		
		0	Energy supply of the processor printed circuit board is defective.		
		10	The boot loader starts as soon as the device is supplied with energy again. The boot loader receives the application from the Inverter Manager when an update is necessary.		
		20	The SunSpec configuration model has been applied and remains in this status for a short period (a few milliseconds). This status will be automatically switched to the next status.		
40225		30	Wait until all parameters and settings have been received from the Inverter Manager. When the Inverter Manager sends the START command, the start process will be set to the next status.	1	uint16 RO
		40	The Inverter Manager sends the active settings to the inverter. When the inverter has received all settings and is ready for operation, a message will be sent to the Inverter Manager and the start-up process is resumed.		
		50	The inverter starts the charging of the DC link and waits until the DC bus is charged.		
		51	The inverter performs a self test for utility grid connection before it connects to the utility grid. The self test includes the insulation resistance, the residual-current device, switch and relay.		

52	The inverter monitors the utility grid for a certain time before it connects to the utility grid, depending on the selected country code. During this monitoring period, the utility grid should be free of errors. If an error occurs during this period the connection to the grid is postponed.			
53	The inverter waits until a short grid interruption is over, before it reconnects to the utility grid. If the error is not over during the waiting time, a repeat self test is necessary.			
54	The inverter waits until an internal measured value returns to the permitted range (e.g. temperature too high), before it reconnects to the utility grid.			
60	The inverter should run in this mode for the majority of the time: grid feed-in runs and the utility grid is free of errors.			
70	The inverter is disconnected from the utility grid and stays in fail safe mode until powered off or rebooted.			
80	If the inverter can not perform grid feed-in for a certain time (a few minutes), it switches to this status.			
40226	Event number (Evt1): NaN	2	bitfield32	RO
40228	Event number (Evt2): NaN	2	bitfield32	RO
Manufacturer-specific event code (EvtVnd1), (SMA: messages regarding the AC utility grid):				
<b>Event bit</b> <b>Assigned event IDs</b>				
0            1, 2, 3 (events)				
1            4, 5, 6 (events)				
2            7, 8, 9 (events)				
40230	3	10, 11, 12 (events)	2	bitfield32    RO
4            13, 14, 15 (events)				
5            16, 17 (events)				
6            18, 25, 26, 27, 28, 29, 30, 38, 39, 41, 42, 43, 44, 45, 48, 49, 50 (events)				
7            19, 20, 21 (events)				
8            22, 23, 24 (events)				

9	51, 52, 53 (events)			
10	31, 32, 33 (events)			
11	54, 55, 56 (events)			
12	34 (event)			
13	35, 36, 37 (events)			
14	40 (event)			
15	61 (event)			
16	62 (event)			
25	211 (warning)			
26	278 (warning)			
<hr/>				
Manufacturer-specific event code (EvtVnd2), (SMA: messages regarding reliability):				
<hr/>				
<b>Event bit</b> <b>Assigned event IDs</b>				
<hr/>				
40232	0	225-240, 275		
	1	242, 243, 245, 274, 353, 356 to 361	2	bitfield32 RO
	2	264, 266		
	3	282		
	4	100		
	5	350, 351, 352, 366		
<hr/>				
Manufacturer-specific event code (EvtVnd3), bits 0 to 31, (SMA: messages regarding the DC grid):				
<hr/>				
40234	<b>Event bit</b>	<b>Assigned event IDs</b>	2	bitfield32 RO
	0	103		
	1	115		
<hr/>				
Manufacturer-specific event code (EvtVnd4), (SMA: messages of the inverters):				
<hr/>				
<b>Event bit</b> <b>Assigned event IDs</b>				
<hr/>				
40236	0	201, 202, 203, 205, 207, 208 (events)		
	1	209, 210 (events)		
	2	258 (event)	2	bitfield32 RO
	3	216, 217, 218 (events)		
	4	219, 220, 221 (events)		
	5	252, 253, 254 (events)		
	6	213, 214, 215 (events)		
<hr/>				

7	263 (event)
8	279 (event)
9	280 (event)
10	281 (event)
11	283 (event)
12	47 (event)
13	323 (event)
24	260 (warning)
25	272 (warning)
26	273 (warning)

## 5.4 SUNNY TRIPOWER STORAGE 60 – Storage System Control Interface (Unit ID = 25)

This interface is used to immediately control the storage system consisting of one or more Inverter Managers and one or more Sunny Tripower Storage inverters (STPS 60). The individual registers are described in the following table.

## 5.4.1 Table SMA.SSC (Storage System Control)

### Data (RO)

To access the following registers, use the following function codes:

- FC4 Read input register for the register addresses 1001 to 1608
- FC3 Read holding register for the register addresses 1201 to 1500

### Input register 1001 to 1608

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
1001	DevInf.SerNo Serial number of the SMA Inverter Manager	2	Unit32	RO
1003	RESERVED			
1005	OpStt Operating state of the inverter ENUM 381 = STOP 1466 = WAITING 1392 = ERROR 309 = OPERATION	2	Int32	RO
1007	RESERVED			
1009	ErrNo Error number	2	UInt32	RO
1011	ErrStt Error status ENUM 0 = INVALID 307 = OK 455 = WARNING 1392 = ERROR	2	Int32	RO
1013	InvMs.TotW Active power, total in 1 W	2	Int32	RO
1015	InvMs.TotVAr Reactive power, total in 1 VAr	2	Int32	RO

1017	InvMs.TotVA Apparent power, total in 1 VA	2	Int32	RO
1019	InvMs.PF Power factor $\cos \varphi$	2	Int32	RO
1021	RESERVED			
1023	RESERVED			
1025	GriMs.V.PhsAB Line-to-line voltage L1-L2, grid feed-in 0.1 V	2	Int32	RO
1027	GriMs.V.PhsBC Line-to-line voltage L2-L3, grid feed-in 0.1 V	2	Int32	RO
1029	GriMs.V.PhsCA Line-to-line voltage L3-L1, grid feed-in 0.1 V	2	Int32	RO
1031	GriMs.Hz Power frequency in 0.01 Hz	2	Int32	RO
1033	DcMs.Vol DC voltage DC plus to DC minus in 0.1 V	2	Int32	RO
1035	DcMs.TotAmp DC current, total in 1 A	2	Int32	RO
1037	Cnt.TotOpTm Operating time in 1 s	2	UInt32	RO
1039	Cnt.TotAcWhOut AC grid feed-in, total in 0.01 MWh	2	Int32	RO
1041	Cnt.TotAcWhOut AC grid feed-in, total in 0.01 MWh	2	Int32	RO
1043	Bat.Cnt.FullCycleCnt Battery full-charge meter in p.u. (if available in the BMS (battery management system))	2	UInt32	RO
1045	Bat.SOH State of health of the battery (SOH) in 0.1%	2	Int32	RO
1047	Bat.TmpAvg Averaged battery temperature in 0.1 °C	2	Int32	RO
1049	Bat.TmpMin Minimum battery temperature in 0.1 °C	2	Int32	RO

1051	Bat.TmpMax Maximum battery temperature in 0.1 °C	2	Int32	RO
1053	Bat.TmpAmb Ambient temperature 0.1 °C (if available in the BMS (battery management system))	2	Int32	RO
1055	NomCapTot Battery capacity in Ah	2	Int32	RO
1057	Bat.SOCConn Battery state of charge (SOC) (strings connected) in 0.1 %	2	Int32	RO
1059	Bsc.WhInAvail Available charging power in 0.1 kWh	2	Int32	RO
1061	Bsc.WhOutAvail Available discharging power in 0.1 kWh	2	Int32	RO
1063	Bsc.WhInAvail Available charging power in 0.1 kWh	2	Int32	RO
1065	Bsc.WhOutAvail Available discharging power in 0.1 kWh	2	Int32	RO
1067	Bsc.WInMax Maximum charging power in 0.1 kW	2	Int32	RO
1069	RESERVED			
1071	Bsc.WOutMax Maximum discharging power in 0.1 kW	2	Int32	RO
1073	RESERVED			
1075	Bsc.VArOxMax Maximum overexcited reactive power in 0.1 kVAr	2	Int32	RO
1077	RESERVED			
1079	Bsc.VArUxMax Maximum underexcited reactive power in 0.1 kVAr	2	Int32	RO
1081	RESERVED			
1083	RESERVED			
1085	RESERVED			
1087	RESERVED			

1089	Cnt.TotAcWhIn AC energy absorbed, total in 0.01 MWh	2	Int32	RO
1601	Cnt.TotAcWhOut Energy meter Battery charging	4	UInt64	RO
1605	Cnt.TotAcWhIn Energy meter Battery discharging	4	UInt64	RO

### Holding register 1201 to 1500

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
1209	WRtg Active power, nominal value in kW	2	Int32	RO
1211	VArRtg Reactive power, nominal value in kVAr	2	Int32	RO
1229	Modbusd.PPC.Prf.Rev PPC profile version fixed 16777220 (1.00.00.R)	2	UInt32	RO
1237	BatCtlComFlbWSpt Inverter active power setpoint (Pref) Active power setpoint of inverter	2	UInt32	RO
1239	BatCtlComFlbVArSp Inverter reactive power setpoint (Qref) Reactive power setpoint of inverter	2	UInt32	RO

## 5.4.2 Control Commands

No. (DEC)	Description / Number code	CNT (WORD)	Type	Access
1401	AuxCtl.SCSOpCmd SCADA SCS operation command 381 = Stop 21416 = Power Control,	2	UInt32	RW
1403	RESERVED			
1405	RESERVED			
1501	Discharge setpoint Limitation of the grid-supplied power at a state of charge below the threshold value plus hysteresis value Scaling factor 10 Representation: Fix 1 Unit: kW	2	Int32	RW
1503	Charge setpoint Limitation of the grid feed-in at a state of charge below the threshold value minus hysteresis value Scaling factor 10 Presentation: Fix 1 Unit: kW	2	Int32	RW
1505	SoC threshold Scaling factor 10 Presentation: Fix1 Unit: %	1	UInt16	RW
1506	Discharge setpoint 2 Limitation of the grid supply at a SoC above the threshold value plus hysteresis value Scaling factor 10 Presentation: Fix1 Unit: kW	2	Int32	RW
1508	Charge setpoint 2 Limitation of the grid feed-in at a state of charge above the threshold value minus hysteresis value	2	Int32	RW

	Scaling factor 10 Presentation: Fix1 Unit: kW			
1510	Hysteresys for SoC threshold changing Hysteresis to threshold state of charge Scaling factor 10 Presentation: Fix 1 Unit: %	1	Uint16	RW
40019	Fast stop 381 = Stop 1467 = Start	2	Uint32	RW
40023	Reactive power setpoint VArSpt in 0.01 %	1	Uint16	RW
40024	Active power setpoint WSpt in 0.01 %	1	Uint16	RW

## 5.5 Direct Marketer Interface (Unit ID = 200)

The individual registers are described in the following table.

### 5.5.1 Table SMA.DM (Direct Marketing)

No. (DEC)	Description / Number code(s)	CNT (WORD)	Type	Access
1	Specified output limitation through direct marketer. Percentage value regarding the maximum active power of system (Reg. 6) with two decimal places. A value of 10000 corresponds to 100%. A value of 0x8000 (NaN) shows that no value has been specified. Valid values from 0 to 10000.	1	uint16	RW
2	Manual output limitation that has been set via SunSpec Modbus. Percentage value regarding the maximum active power of system (Reg. 6) with two decimal places. A value of 10000 corresponds to 100%.	1	uint16	RO
3	Output limitation through the electric utility company that has been set via the IO box. Percentage value regarding the maximum active power of system (Reg. 6) with two decimal places. A value of 10000	1	uint16	RO

	corresponds to 100%. A value of 0x8000 (NaN) shows that no value has been specified.			
4	Minimum of all output limitations. The nominal PV system power is derated to this value. Percentage value regarding the maximum active power of the system with two decimal places. A value of 10000 corresponds to 100%.	1	uint16	RO
5	Currently, the active power of the system is shown in kW with one decimal place. A value of 600 corresponds to 60.0 kW.	1	uint16	RO
6	Maximum active power of the system without decimal place. A value of 60 corresponds to 60 kW.	1	uint16	RO
7	Meter for checking the connection (watchdog). The meter is increased by one every 200 ms. After reaching 65535, the meter starts again with 0.	1	uint16	RO

## 5.6 Manual Restart (Unit ID = 201)

### 5.6.1 Table SMA.MR (Manual Restart)

No. (DEC)	Description / Number code(s)	CNT (WORD)	Type	Access
1	A value of 1 initiates the manual restart. Then the register is internally reset to 0 by automated means and the function is deactivated. 1 = activated 0 = deactivated	1	uint16	RW

## 6 Troubleshooting

Problem	Cause and corrective measures
<p>The Inverter Manager cannot be accessed by the Modbus client.</p>	<p>The correct IP address for the Inverter Manager may not be set in the Modbus client.</p> <p><b>Corrective measures:</b></p> <ul style="list-style-type: none"> <li>• Read off the IP address of the Inverter Manager (see router manual).</li> </ul> <p>Ensure that the correct IP address for the Inverter Manager is set in the Modbus client (see the Modbus client manufacturer's manual).</p> <hr/> <p>The firewall may not be set correctly.</p> <p><b>Corrective measures:</b></p> <ul style="list-style-type: none"> <li>• Enable port 502 in the firewall (see firewall manual).</li> </ul>
<p>The Inverter Manager does not send a reply within the reply time specified by the Modbus client.</p>	<p>The Modbus server in the Inverter Manager may be currently overloaded.</p> <p><b>Corrective measures:</b></p> <ul style="list-style-type: none"> <li>• Extend the response time set in the Modbus client successively by one second respectively.</li> </ul>
<p>A NaN value is reported in the Modbus client (see Section 3.6 "SunSpec Data Types and NaN Values", page 13).</p>	<p>You may be trying to read from a Modbus register that is not supported by the inverter.</p> <p><b>Corrective measures:</b></p> <ul style="list-style-type: none"> <li>• Contrast and compare the available measured values for your SMA device with the Modbus registers requested by this SMA device (see Section 5 "SunSpec Modbus Profile - Allocation Tablesn", page 16).</li> </ul> <hr/> <p>You may be trying to read from a Modbus register that is not defined in the SunSpec Modbus profile.</p> <p><b>Corrective measures:</b></p> <ul style="list-style-type: none"> <li>• Remove the register address used from the data processing.</li> <li>• Install a newer version of the Modbus profile via a firmware update.</li> </ul>

---

The NaN value 255 is reported. You may be trying to read a configuration of a non-existent device.

**Corrective measures:**

- Set the Unit IDs = 125 to 167 in the Modbus client for the desired SMA device.
- Check if the configuration read is supported by the device.

---

You may be trying to read from a write-only Modbus register.

**Corrective measures:**

- Read off the access type of the affected register from the "Access" column of the corresponding assignment table and correct it in the Modbus client.

---

Modbus exception 1 "Illegal Function" is reported in the Modbus client.

You may be trying to write to a data block whose target address range has registers that are not writable.

**Corrective measures:**

- Check whether all registers to be written to are writable.

---

Modbus exception 2 "Illegal Data Address" is reported in the Modbus client.

You may be trying to write to a Modbus register that is not defined in the SunSpec Modbus profile.

**Corrective measures:**

- Check the Modbus address to be written to in the Modbus client for errors.

---

You may be trying to read or write to a data block whose start or end address does not correspond with that of a register (alignment not correct).

**Corrective measures:**

- Check the start or end address of the data block.
- Check the register at the start or end address of the data block to be read for consistency. It may be that one of the two registers is inconsistent.

---

You may be trying to write to a data block and one of the registers to be written to are not supported by the device.

**Corrective measures:**

- Check that the register to be written to is provided by your SMA device (Technical Information SMA Modbus Interface at [www.SMA-Solar.com](http://www.SMA-Solar.com)).

<p>Modbus exception 3 "Illegal Data Value" is reported in the Modbus client.</p>	<p>You may be trying to write to a data block (Modbus commands 0x10 and 0x17) and one of the values has a data type that is not permitted.</p> <p><b>Corrective measures:</b></p> <ul style="list-style-type: none"> <li>• Read off the data type of the register to be written to from the "Type" column of the corresponding assignment table and correct it in the Modbus client.</li> </ul>
<p>Modbus exception 4 "Slave Device Failure" is reported in the Modbus client.</p>	<p>You may be trying to read or write to a register of a device, but are using a unit ID that is not permitted.</p> <p><b>Corrective measures:</b></p> <ul style="list-style-type: none"> <li>• Set the Unit IDs = 125 to 167 in the Modbus client for the desired SMA device.</li> </ul>
<p>Other Modbus exceptions</p>	<p><b>Corrective measures:</b></p> <ul style="list-style-type: none"> <li>• For Modbus exceptions, see "Modbus Application Protocol Specification" at <a href="http://www.modbus.org/specs.php">http://www.modbus.org/specs.php</a>.</li> </ul>
<p>Other errors</p>	<p><b>Corrective measures:</b></p> <ul style="list-style-type: none"> <li>• For troubleshooting on the SMA devices, use the error code shown in the display or LCS tool. To decrypt the event messages of inverters, you require additional information (for event messages, see the inverter installation manual at <a href="http://www.SMA-Solar.com">www.SMA-Solar.com</a>).</li> </ul>

## 7 Technical Data

### 7.1 Modbus Communication Ports

The following table shows the default setting of the supported network protocol:

Network protocol	Communication port
TCP	502



#### Communication port not able to be changed

The communication port used for Modbus TCP - 502 - can not be changed.

### 7.2 Data Processing and Time Behavior

In this section, you will find typical data processing and reaction times of the Modbus interface.

#### Minimum read-write frequency

The minimum frequency with which data can be requested via the Modbus protocol from the Inverter Manager or written to the Inverter Manager is 1 Hz. This means that at most one Modbus command per second is permitted (for supported Modbus commands, see Section 3.5 "Reading and Writing of Data", page 13).

## 8 Contact

If you have technical problems with our products, please contact the SMA Service Line. We require the following information in order to provide you with the necessary assistance:

- Modbus master software or hardware used
- Software version of the inverter
- Type of communication interface between the inverter and the devices
- Type, serial numbers, and software version of the devices that are connected to the system

You can find your country's contact information at:



<https://go.sma.de/service>



SMA Solar Technology

[www.SMA-Solar.com](http://www.SMA-Solar.com)

